


BOLD

User Manual Hand Power Lifter

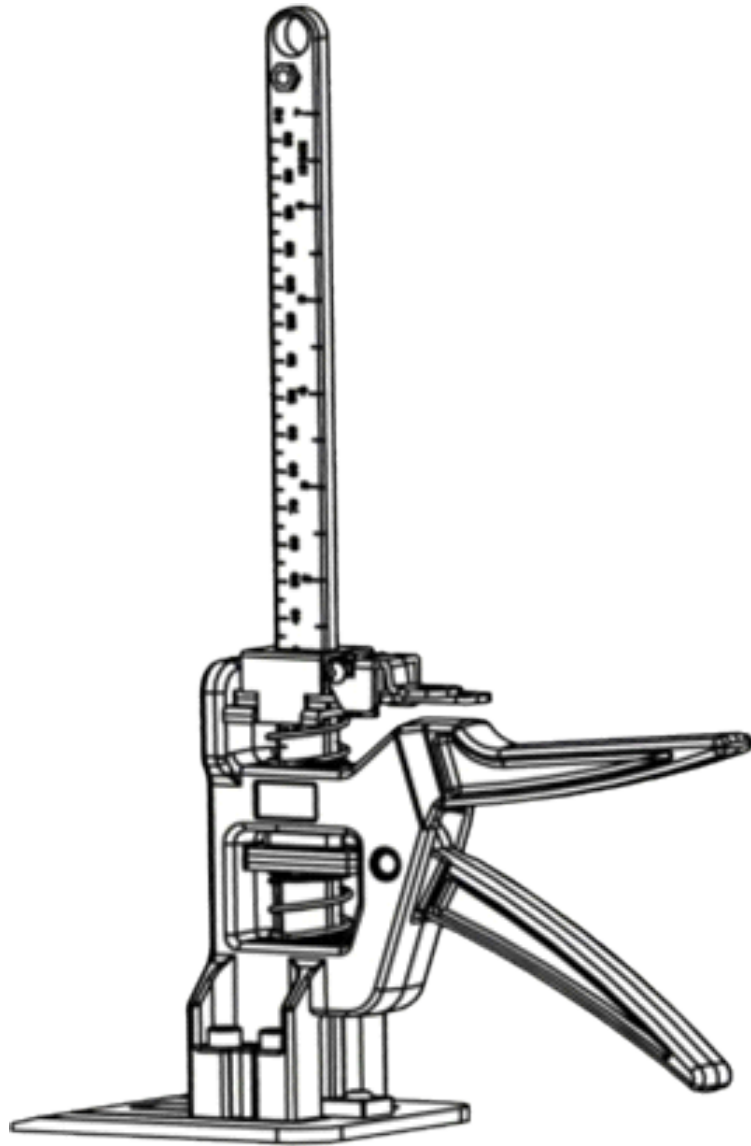


BHL-55F & BHL-60F


Please read this user manual before you use the product.

TECHNICAL BACKGROUND

This product is designed to meet a wide range of market needs and is capable of lifting common household objects with ease. It is also suitable for architectural and installation tasks, including tile positioning and leveling, door and window installation and adjustment, and expanding the clamping force of woodworking tools. As a versatile handheld lifting device, it provides precise control when handling heavy objects, allowing for smooth, constant speed lifting as well as slight or rapid lowering. This ensures both safe operation and high efficiency.

PRODUCT OVERVIEW

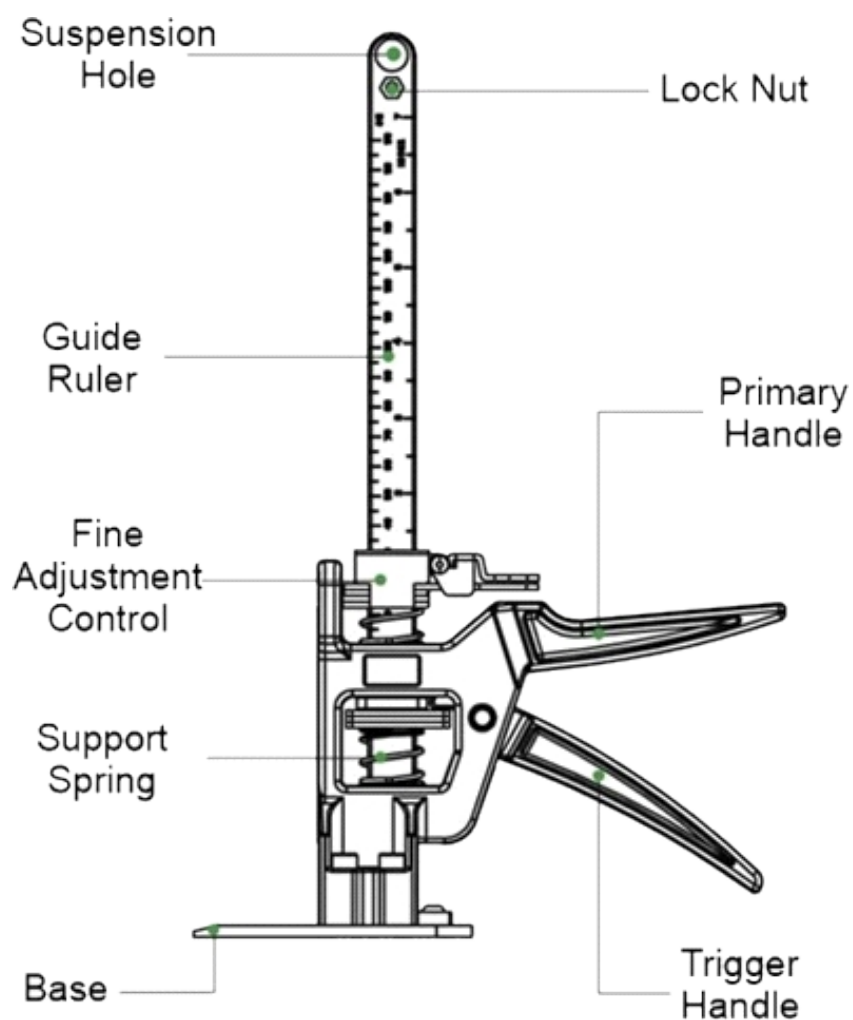

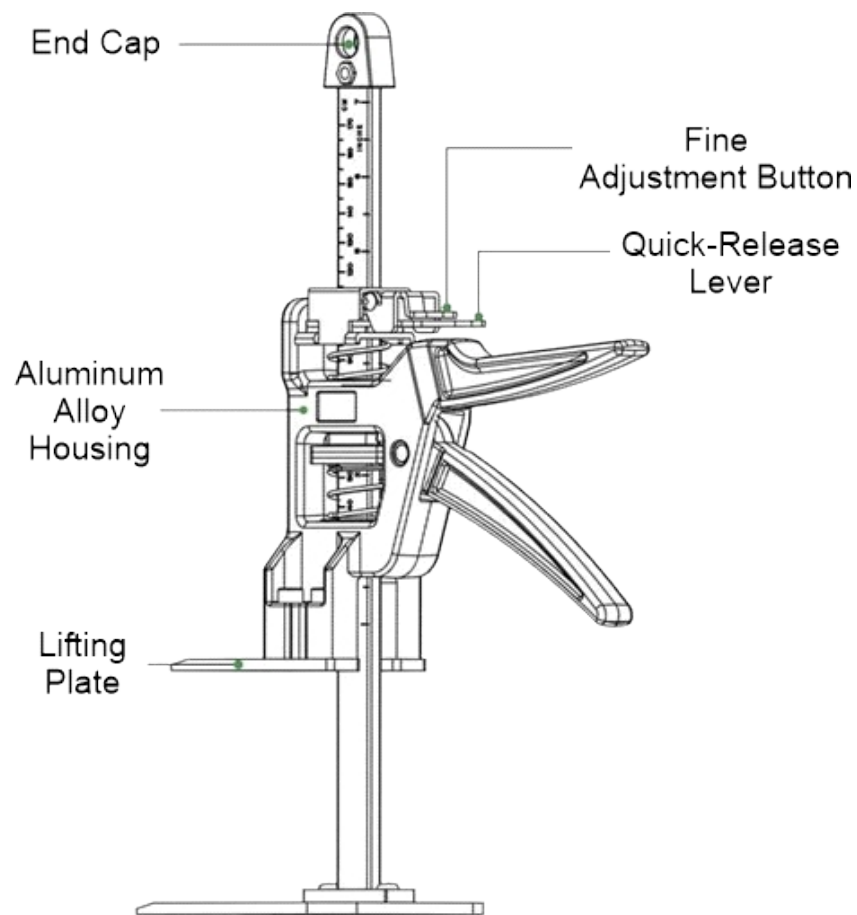


Configuration parameters


Part No	BHL-55F	BHL-60F
Lifting Height	5-1/2" (140mm)	5-1/2" (140mm)
Recommend Operating Load	350 LB (158 KG)	350 LB (158 KG)
Maximum Load	440 LB (200 KG)	440 LB (200 KG)
Base Dimension	3-5/8" x 3-1/8" x 5/32" 92 mm x 80mm x 4mm	3-5/8" x 3-1/8" x 5/32" 92 mm x 80mm x 4mm
Material	Aluminum, Steel & Stainless Steel	Aluminum, Steel & Stainless Steel

Operation Guide


Insert the base and the riser into the bottom of the object, then tilt it forward so the riser can fully support the load. For objects that sit flush with the ground, use two risers in combination.

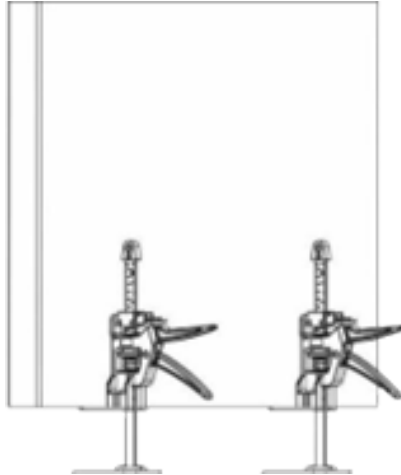


Press the lever repeatedly to raise the object to the desired height.

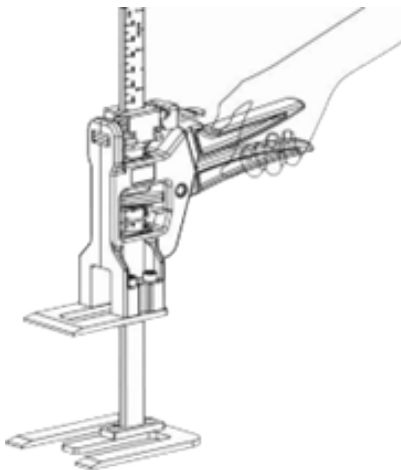


Sideways Expansion: Insert the base and riser completely so the riser can fully support the applied force

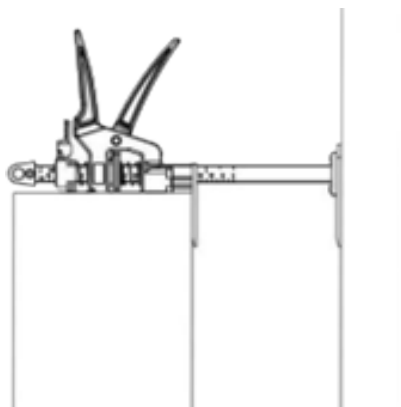

Internal Clamping: Remove the limit screw, reposition the base and guide ruler as required, and then reinstall them.

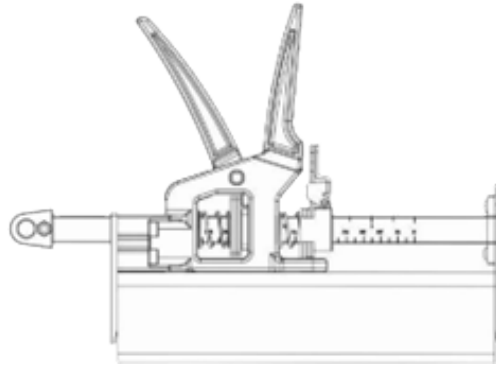

Lowering Control: Press the **FAST** button to lower the object quickly, then press the **SLOW** button repeatedly to achieve a uniform lowering.

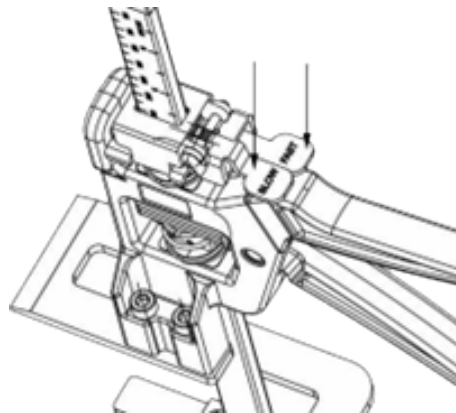

Safety Precautions

- a. Do not use the power lifter when it is only partially in contact with heavy object (Figure 1).
- b. Do not operate the power lifter on uneven or loose ground.
- c. Do not operate the power lifter beyond its intended capacity (Figure 2).
- d. Check all fasteners regularly; tighten any that are loose.

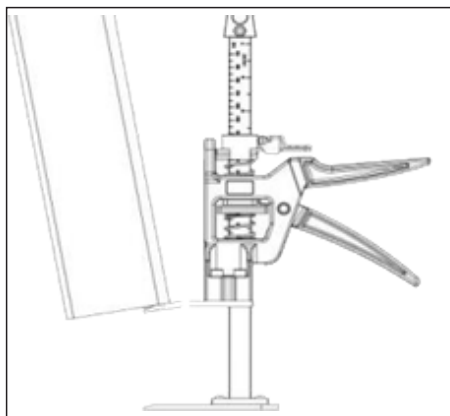


Figure 1


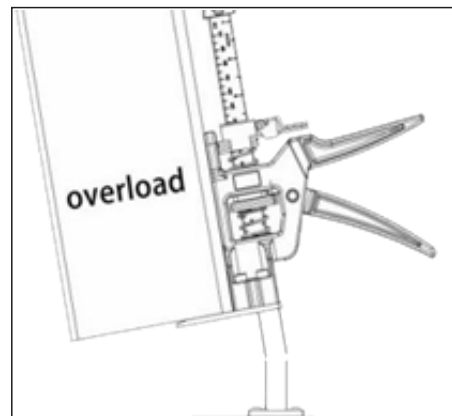


Figure 2

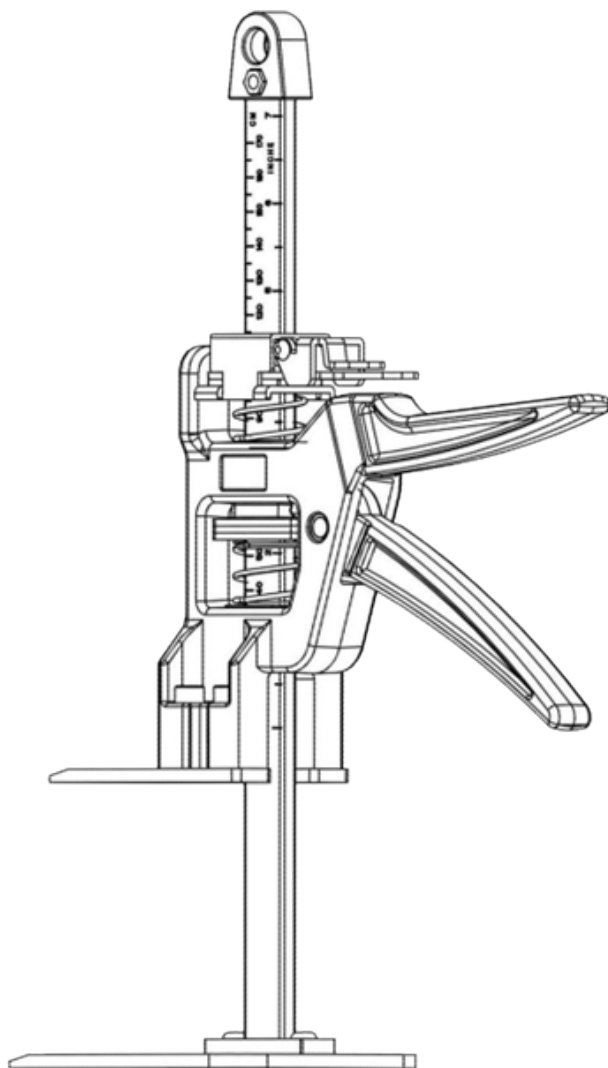

This manual is for reference only. The product picture may be slightly different from the actual product. The actual product shall prevail.